



TiOC HOW TO GUIDE

How to set the alarm output and the alarm delay time

For a Camera-only System

The following guide enables you to set up the alarm output and the alarm delay time on **Wiz Sense** (Series 3) and **Wiz Mind** (Series 5 & 7) camera-only systems.



Series
DH-IPC-HF/HFW/HDW/HDBW3X4X Series
DH-IPC-HF/HFW/HDW/HDBW5X4X Series
DH-IPC-HF/HFW/HDW/HDBW7X4X Series

Examples
HFW3549T1-AS-PV
HDW5241TM-ASE
HFW5242H-ZE
HDBW7442H-Z

System Version: V2.800.00AD000.0.R

Build Date: 2020-07-29

NB: The firmware version is based on the latest version when this document was created and may slightly differ from future versions, however this will not affect any of the functionality.

TIOC HOW TO GUIDE | Setting up the alarm output and the alarm delay time

Step 1: Log in to the camera, go to **Setting** > **Event** > **Alarm** .

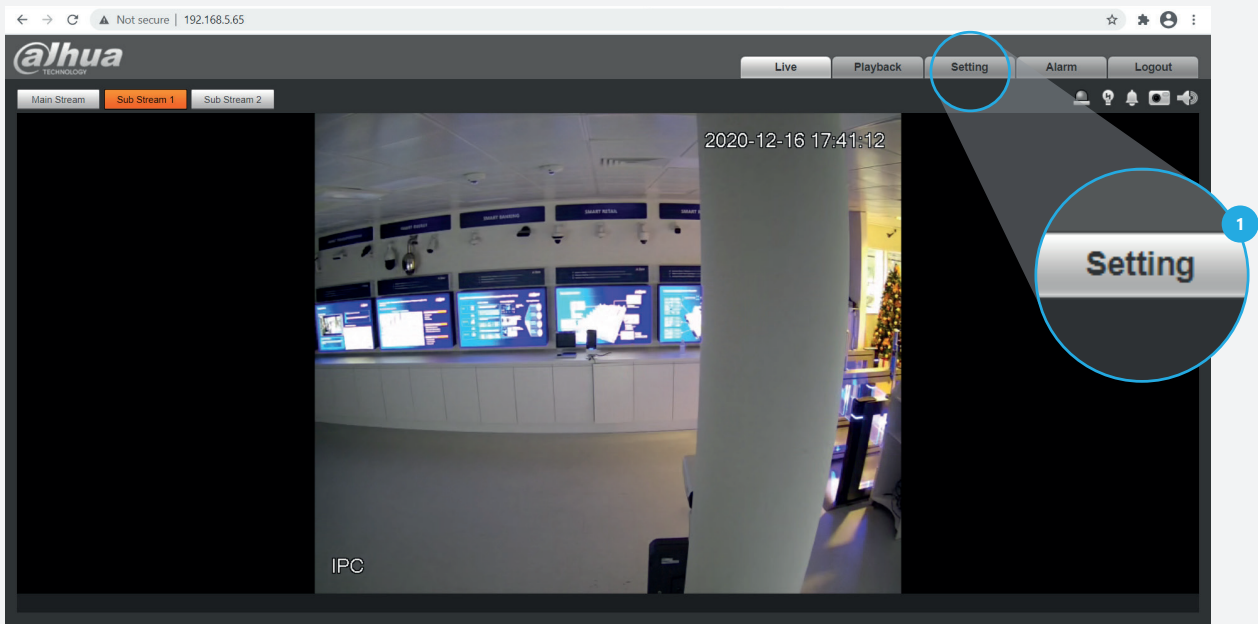




Figure 1: Start from the first page of the camera setup.

Note: You can *click* these icons   on the top right hand corner to test, enable or disable the light or alarm output on the live view page.

Step 2: Tick "Enable" to activate the functions and adjust the related settings such as "Recording Delay" or "Alarm Delay".

Then, *click* **Save** to save your settings.

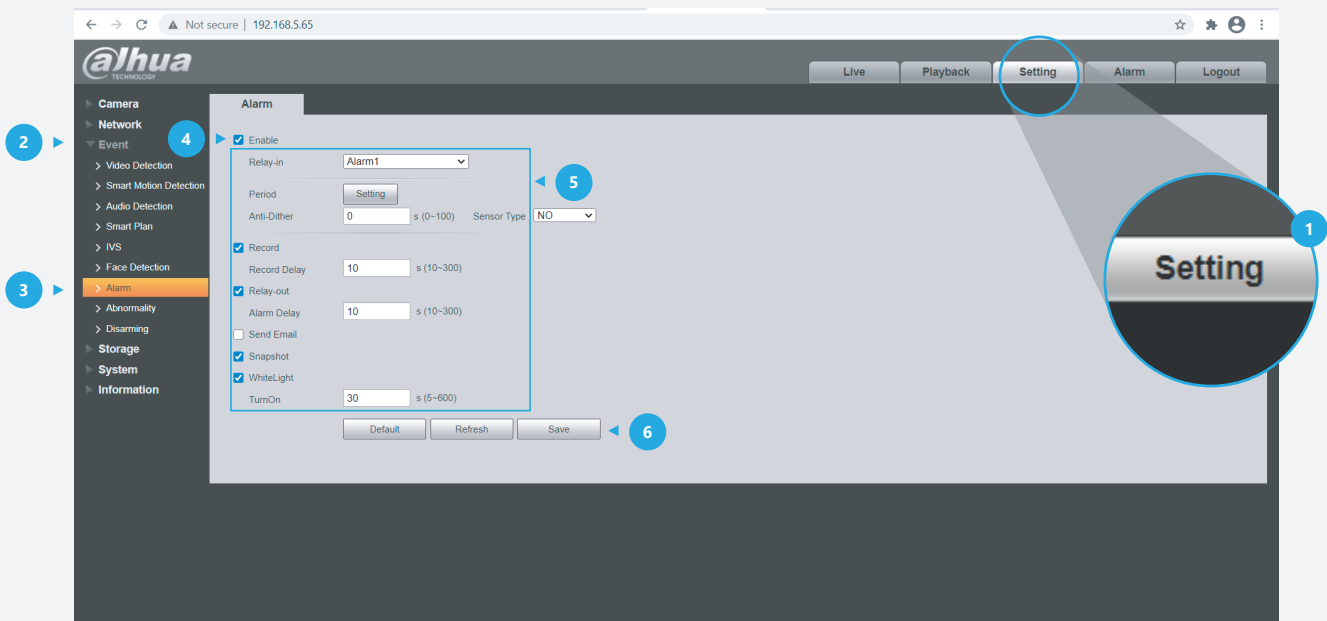


Figure 2: Enable and adjust related settings

Step 3: Check the alarm log.

Go to **Setting** > **Information** and **click Log**, here you can check recordings that have been saved and new settings for the alarm. You can check the alarms by searching "Events" by time period. **Click** each recording and you will find the type of Smart Motion Detection and more information.

The screenshot shows the Dahua web interface. The navigation menu on the left has 'Log' highlighted with a callout '3'. The main content area has a 'Log' tab selected with a callout '2'. The log table has 10 entries, with the 5th entry selected and highlighted in yellow, with a callout '4'. A callout '1' points to the 'Setting' tab in the top navigation bar. The detailed information panel below the log shows the following data:

No.	Log Time	Username	Log Type
1	2020-12-16 12:21:10	System	Event End
2	2020-12-16 12:21:05	System	Event Begin
3	2020-12-16 12:20:56	System	Event End
4	2020-12-16 12:20:51	System	Event Begin
5	2020-12-16 12:20:14	admin	Save Configuration
6	2020-12-16 12:05:53	System	Event End
7	2020-12-16 12:05:49	System	Event Begin
8	2020-12-16 12:05:41	System	Event End
9	2020-12-16 12:05:37	System	Event Begin
10	2020-12-16 11:18:17	admin	Save Configuration

Detailed Information:
Time: 2020-12-16 12:20:14
Username: admin
Type: Save Configuration
Content: Address: 192.168.5.253
Name: Alarm

Figure 3: List of alarms

*Design and specifications are subject to change without notice.

DAHUA UK & IRELAND

Quantum, 60 Norden Road, Maidenhead, Berkshire SL6 4AY
Tel: +44 (0) 1628 613 500
sales.UK@dahuatech.com
support.UK@dahuatech.com

If you still encounter problems
operating your Dahua device,
please call **+44 (0)1628 613 500**