



TiOC HOW TO GUIDE

How to set Alarm Output and Alarm Delay Time

For an NVR-system

The following guide enables you to set up the Alarm Output and Alarm Delay Time function on **Wiz Sense** (Series 3) and **Wiz Mind** (Series 5 & 7) NVR-systems.



Series

NVR5000-1 Series

Example


NVR5216-16P-1


System Version: V4.000.10BE002.4

Build Date: 2020-09-10

NB: The firmware version is based on the latest version when this document was created and may slightly differ from future versions, however this will not affect any of the functionality.

TiOC HOW TO GUIDE | How to set Alarm Output and Alarm Delay Time


Step 1: Here is Motion Detection as an example. Go to  **ALARM** > "Video Detection" > **Motion Detection** .

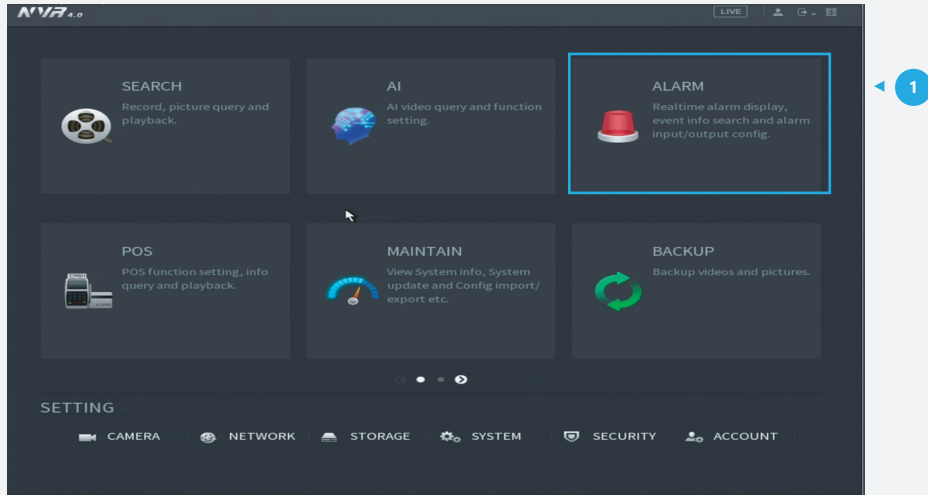

Step 2: Choose the channel you want to apply the alarm to and click **Enable** to activate the function. Type the time for Anti-Dither and Post-Alarm to delay the alarm time.

Click **Apply** at the bottom right corner to save all the changes.

Note: Anti-Dither means alarms during this time will only be reported once. Post-Alarm means how long the alarm will be reported for after the event has happened, which could be coordinated with the function of Anti-Dither.

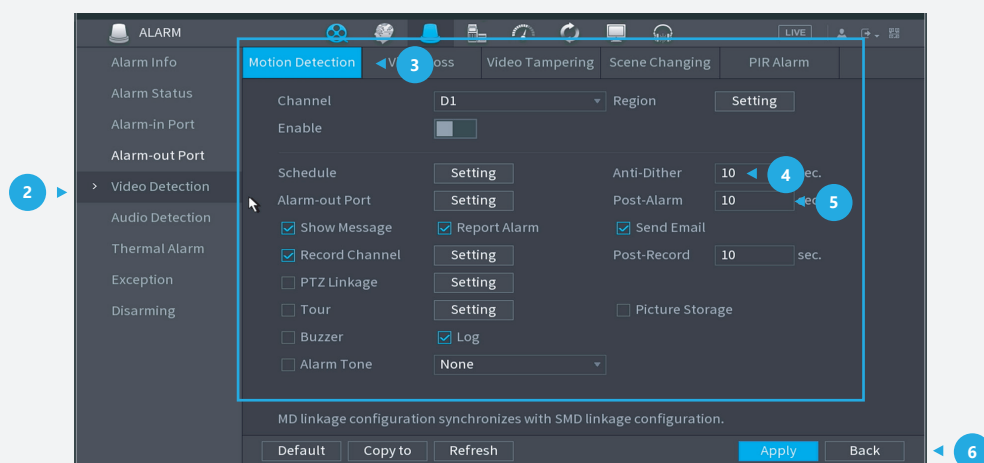

*Design and specifications are subject to change without notice.

DAHUA UK & IRELAND

Quantum, 60 Norden Road, Maidenhead, Berkshire SL6 4AY
Tel: +44 (0) 1628 613 500
sales.UK@dahuatech.com
support.UK@dahuatech.com

If you still encounter problems
operating your Dahua device,
please call **+44 (0)1628 613 500**