

VSAT01

HD Free to Air Satellite Receiver

User Guide



Technical Support

For further information visit **www.labgear.co.uk** or Email: technical@labgear.co.uk

Installation and Operation



Connect the satellite receiver to your TV with the HDMI cable supplied. Then select the relevant HDMI input on your TV menu. Press [menu] on the satellite receiver remote control and the main menu shown above will appear on screen. Press the \blacktriangle keys on the remote to select menu items, and press the [OK] key to confirm your selections. To leave a screen press [EXIT].

Single Satellite Sear					
Installation	Satellite	<	(1/1) Astra 2E	>	
Sustam Satur	FTA Only		Yes		
System Setup	Scan Channel	Scan Channel			
Edit Channel	Network Search		No		
	Scan Mode	de Blind Scan			
Tools	Tuner		LNB1		
Media Player	Search				

Enter "Single Satellite Search" menu, to search for available channels on a satellite. Select and confirm the satellite information using the ▲▼ keys. FTA only should be set to Yes as this receiver will not decode scrambled/ encrypted channels. In "Scan Mode" function, choose "Blind Scan" to locate all available channels. You can use "Auto Scan" but if any of the channels you want don't appear you will then need to try searching again with Blind Scan. Some channels will be suffixed 'Fail' this indicates that no Free to Air channels have been found on this transponder.

Multi Satellite search

	Satellite	<	(1/1) Astra 2E	>
	FTA Only		Yes	
System Setup	Scan Channel		TV+Radio	
	Network Search		No	
Edit Channel	Scan Mode		Auto Scan	
	Tuner		LNB1	
E Tools	Search			
	Astra 1		Hotbird	
🔊 Media Player	q			

PLEASE NOTE This search mode is only used for motorised dishes.

Enter the "Multi Satellite Search" window. Press the "Left" and "Right" keys to select a "Satellite". Then change the search settings to match the satellites you want to search for. (The available settings are the same as for "Single Satellite Search"). Parameter information available from www.lyngsat.com or flysat.com Before a Multi Satellite Search, you need to first select the satellites you want to searchfor in the "Satellite List" window. Press [OK] key to select the satellites and they will be marked with a heart- shaped Icon.

TP List		Edit TP abc
		Frequency < 10714 >
Installation	1 355 2 341	Symbol Rate 22000 KS/s Polarity H Save Cancel
System Setup	3 341 4 342	Add TP abc
Edit Channel	5 342 6 343 Signal Inten	Frequency 〈 3710 MHz 〉 Symbol Rate 10919 KS/s Polarity H
E Tools	Signal Quali	Save Cancel
Media Player	Edit	Add Are you sure to delete?

If after searching you are still missing channels you want to view from a satellite. You can enter the TP List menu to search by transponder. Select the correct satellite using the arrow keys. You will then need to enter the frequency, symbol rate and orientation of the transponder (these can be looked up on sites like lyngsat.com). You can then search, edit, add or delete using the indicated colour key.



In the system set up menu, press the arrow keys to select the type of information youwant to change, such as Language. Display, Video output and display, time settings, parental lock, favourite list, PVR information and settings. The password for Parental Lock is "0000" in default settings. In Parental Lock you can lock and unlock the channels and change the password as well.



Enter the "TV Channel List" to see all the channels found, use the ◀► keys to change satellites. Edit the channels using the favourite, lock, delete, edit and function keys. Using the colour keys indicated to select the functions and up and down arrow keys to switch between the channels to be edited, Press OK to confirm.

Radio Channel List

Can be edited in exactly the same way as the "TV Channel List"

Delete All

A warning window appears if you select that you want to delete all the channels, confirm whether you want to delete all the information.



Enter the "Tools" menu to check the software version information, to revert to Factory Setting, to load software updates, biss management and playing games. NOTE: Software updates need to be loaded on a suitable USB device which needs to be plugged into the USB port. Don't remove the USB device during the upgrade process. Change the biss key information using the color keys. (Not normally used).

Media Player Options

5 Media Player

	PVR
Installation	Video
🚯 System Setup	Music
	Image
Edit Channel	
E Tools	
🖾 Media Player	

Use the USB 2.0 port on the back of the receiver to plug in USB devices for recording and playback.

Media Player Main Menu - Check the media files stored on connected USB devices, such as photos, music, videos etc. When channels are recorded the recorded files will be saved to the connected USB devices.

PVR				
Ø PVR	🎵 Music		🖍 Imag	e Video
	< USB1	>		
No. D	ate Channel			
1 2	6/04 [TS]NMTV_H			
				[TS]NMTV_H 12:24-12:25 43M
/mn	t/uda 1		-	00:00:08 00:01:19
Switch	ne Lock n Exit	Delete		► II ■

Press the [REC] key to record the channel currently playing.

Press the [STOP] key to finish recording.

The information on recordings is saved to the "PVR" menu.

Press the [UP] and [DOWN] \bar{k} eys to select the recorded channel information. In the top right hand corner is the video preview window.

Press the [PLAY] key to play a selected recording.

Use the colour keys to select rename, lock and delete functions and to edit information on recordings.

Non PVR Video Playback

() P	V R	🎵 Musi	с		Image		▶ Video
	<	USB1	>				
1 🗁	.android_	secure					
	LOST.DI	र					
MPG	ALIN-KT	√.m				ALIN-KTV	.m
MPG	CCTV-HE	0_19710109				43M	20 🗢 🗀
/mnt/	uda 1				0	0.00.08	00.01.19
Edit					Ŭ		_
1 Switc	h 🔼 :	Sort Exit	Exit	3 Repea	at	► II	

To playback non PVR videos stored on devices connected via the USB port, from the main menu use the ▲▼ keys to select "Media player" then select "Video" and the screen shown above will open. Select a video and press the [PLAY] key to play.

Music						
() P	/R	🎵 Music		In In	nage	▶ Video
	<	USB1	>			
1	.android_se	ecure				
Mp3	Hallelujah.n	np3			Hallel	ujah.mp3
MPG CCTV-HD_19710109 2868 KB				KB		
					00:00	3:03 🗢 🗀
	/mnt/uda 1				00:00:0	00:03:03 ► ■ ► ►
🔲 Play I	.ist 🔟 FA	V 🗔 FA	AV AII	📃 Edit		
1 Switc	n 🔼 So	rt <u>3</u> Re	epeat	Exit Exit		

To play music stored on devices connected via the USB port, from the main menu use the $\blacktriangle \nabla$ keys to select "Media player" then select "Music" and the screen shown above will open. Select a music track and press the [OK] key to play.

Image

() P	VR .	🎵 Musi	c		Image	► Video
-	<	USB1	>			
1 DPG	.android_s LOST.DIR Beach.JP	secure G				Beach.JPG 1024X644X24 bpp 193 KB
/mnt/	uda 1					
Play L	_ist	AV III	FAV All Setup	Edi 4 Mul	it Itiview	Exit Exit

To view photo images stored on devices connected via the USB port, from the main menu use the arrow keys to select "Media player" then select "Image" and the screen shown above will open. Select an image and press the [OK] key to view. A preview image appears in the window in the top right corner of the screen.



Troubleshooting

Question Classification	Question description	Approach
Power Supply	The units power cable is connected but doesn't work	 Check power and mains socket switch is switched on
Remote	Remote doesn't work or works poorly	 Check polarity of batteries agrees with the markings in the battery compartment Fit fresh batteries
Signal	Satellte cable connected but no signal	 Check the satellite cable connection Check dish is correctly aligned and that the correct satellite is selected.
	Poor picture	 Check if signal level and quality is good Check the satellite cable connection and TV connection
	Picture colour is abnormal.	 Check satellite receiver and TV are set to the same picture format (PAL in the UK) Check LNB and satellite receiver are set the same
Output	No Sound or poor sound	 Check all audio cables work and are properly connected. Check that Audio output is not muted or turned down on the receiver or TV. Make sure the Audio is set to stereo. Check sound setting, is set to digital sound
	No Video output	 Check if the correct signal input source to the TV is selected. Check if all video cables are connected and working correctly Check if the satellite receive is in standby mode
USB Device	Files not visible, format is not recognised	Check USB device format is compatible Check file format is compatible

Declaration of Conformity

Hereby, Labgear declares that the radio equipment: Satellite Receiver for satellite broadcast reception in domestic premises is in compliance with the Radio Equipment Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.labgear.co.uk/DoC

Technical Support

For further information visit **www.labgear.co.uk** or Email: technical@labgear.co.uk

Specifications Satellite Receiver

Product Name	VSAT01 HD Free to Air Satellite Receiver				
Power Supply	AC 100~240V 50/60Hz				
Consumed power	Power≤9W (Power On), Power≤1W (Standby)				
Environmental conditions	Operating Temperature 0°C - 40°C Permissable relative humidity: 10 - 80%				
Connections	LNB F Connector	VIDEO HDMI/Phono	AUDIO Phono	USB USB A	RS232 RS232

Remote Control

Batteries	2x AAA 1.5V Alkaline Batteries			
Operating distance	Up to 8m (line of sight)			
Operating range	30° Left to right 20° Up and Down			
Weight	110g including bat	tery		
KEY FUNCTION				
😃 :Standby ON/OFF		MUTE: To switch sound on/off		
E: Select audio		TTX:Teletext on/off		
EPG: Show EPG (Electro	onic Program Guide)	ASPECT: To switch the video aspect ratio		
0~9: To select a channel	by direct number input.	Stop: To stop recording the program		
TV/R: To switch betwee	n TV and Radio channels	FILE LIST: To display USB file list		
EXIT: To return to previo	ous screen or menu	INFO: To display current program information		
P+/P-: To change page fo	rwards backwards	DVR LIST: To display DVR list		
FAV: To access your favo	ourite channels list	NEXT: To skip to the next item		
FF: To scan forward whe program or time shift	n playing a recorded	◆ : To decrease volume, or move cursor left/right		
SUBT: To switch betwee	n available subtitles	FIND: To search channel and program		
FORMAT: To switch the video resolution 576p/ 720p/1080i		REC: To start recording program		
PAUSE: To freeze the image being viewed		PLAY: To play the recorded program		
MENU: To enter main menu				
▲▼ : To move cursor Up/Down in menu setting change channel in normal TV view mode		REW: To scan backward when playing a recorded program or time shift		
BACK: To switch between the last viewed channel and the current channel being viewed.		Red / Green /Yellow/Blue colored button: Edit Program		



Waste electrical and electronic products must not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice