

** NEW SLEEK VERSION VOYAGER VOICE GSM Intercom



- **Male or Female Spoken Voice**
- **Control 2 Gates or Doors**
- **IP55 Waterproof Housing**
- **5 Call Out Numbers**
- **200 Call In Numbers**
- **Automated Schedules**
- **Do Not Disturb Mode**
- **Back Light and Side Lights**
- **Downloadable Log**
- **Programming Security Code**
- **Free Installer & End User App**

| | |
|--|--|
| Operating Bands | 4G, 3G and 2G GSM bands |
| Power | 12V DC 2 Amp (supplied) |
| Call Out Phone Numbers | 5 |
| Dial to Open users | 200 |
| Keypad Operation | 10 x 4 Digit codes for any number of users. 24 x 7 Or Time and Day limited Codes Temporary Lifetime Code available Remove, List & Configure all codes |
| Method of programming. | SMS Text and Mobile Phone App |
| Method of operation. | - Press the intercom call panel - Dial to open (no call cost) and SMS text - Enter 4 digit pre configured Keypad code |
| Pulse Time | 3 seconds (Configurable). |
| Gate open for fixed period | SMS command or App. Programmable time period. From a minute to many hours. |
| Security Settings | 4 Digit security code can be applied to all SMS Text. |
| Number of Inputs | 2 |
| SMS Text on gate open/close | Control Phone or Phone 1 |
| Gate Status | SMS text to query if gate open. |
| Keeps SIM on the network | Text sent by device to Control Phone or Phone 1, every 75 days to add credit. |
| Automatic Schedules for Output 1 or Output 2 | 10 schedules that can be specified by day and time. It can be specified with a limited lifetime if required. |




** NEW SLEEK VERSION VOYAGER VOICE GSM Intercom

Keypad Unit - External Dimensions

Front of Front Panel
Front Elevation

Back Box

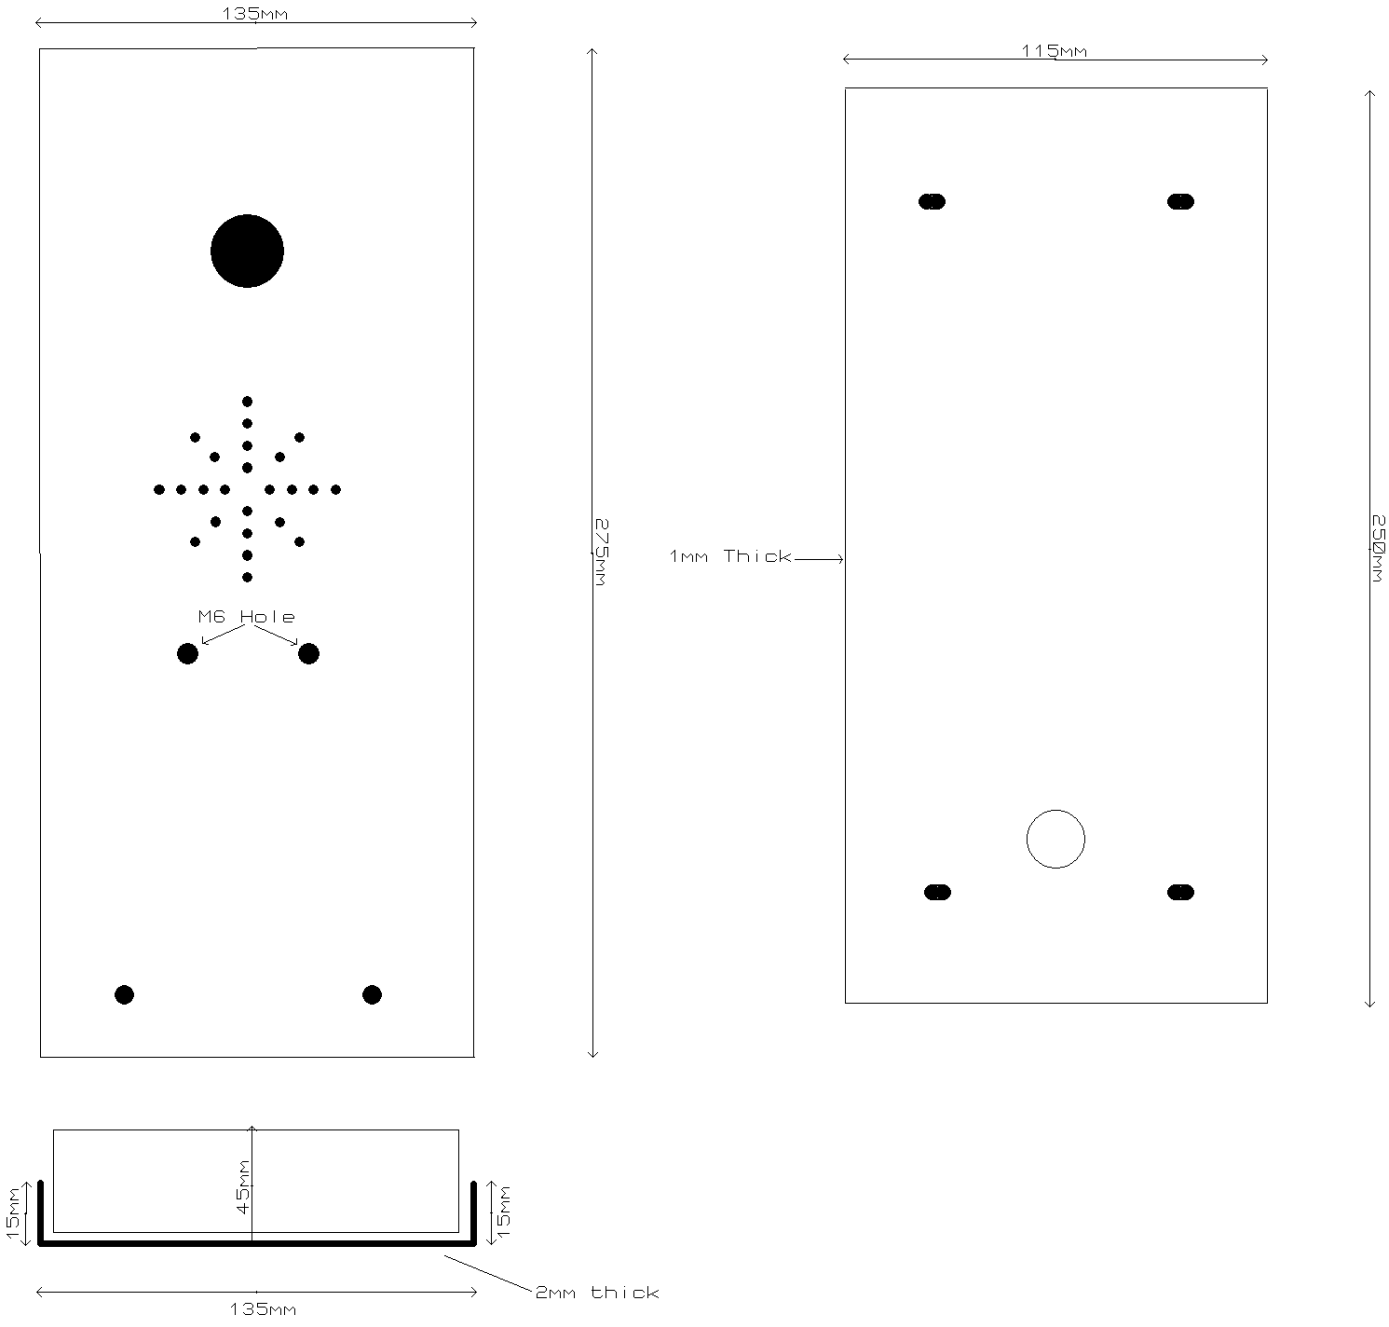


Plan View





**** NEW SLEEK VERSION
VOYAGER VOICE GSM Intercom**

No Keypad Unit—External Dimensions

Front of Front Panel
Front Elevation

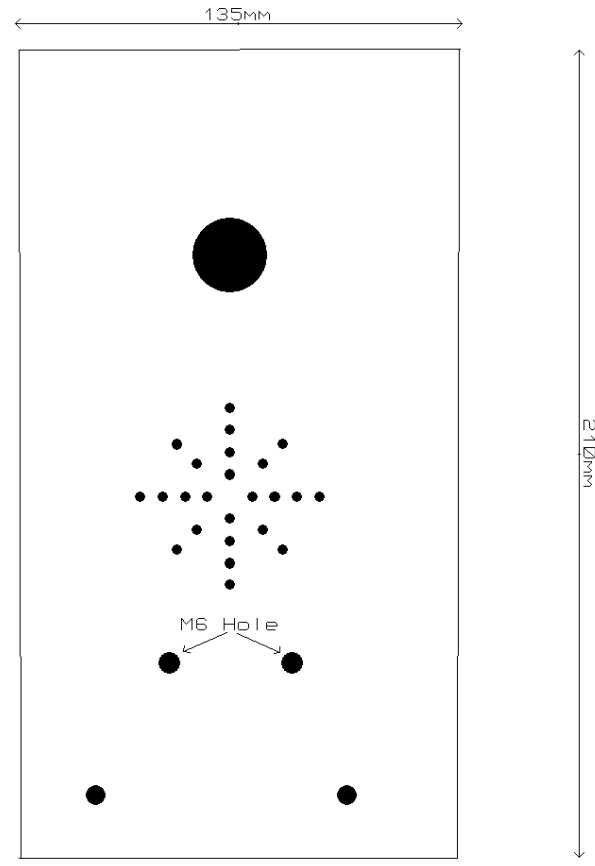

Back Box

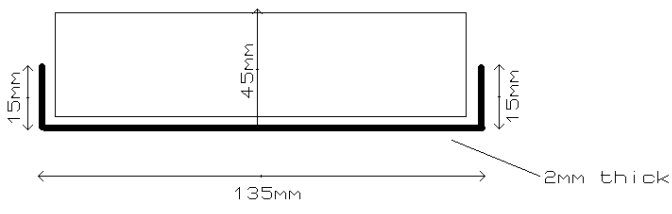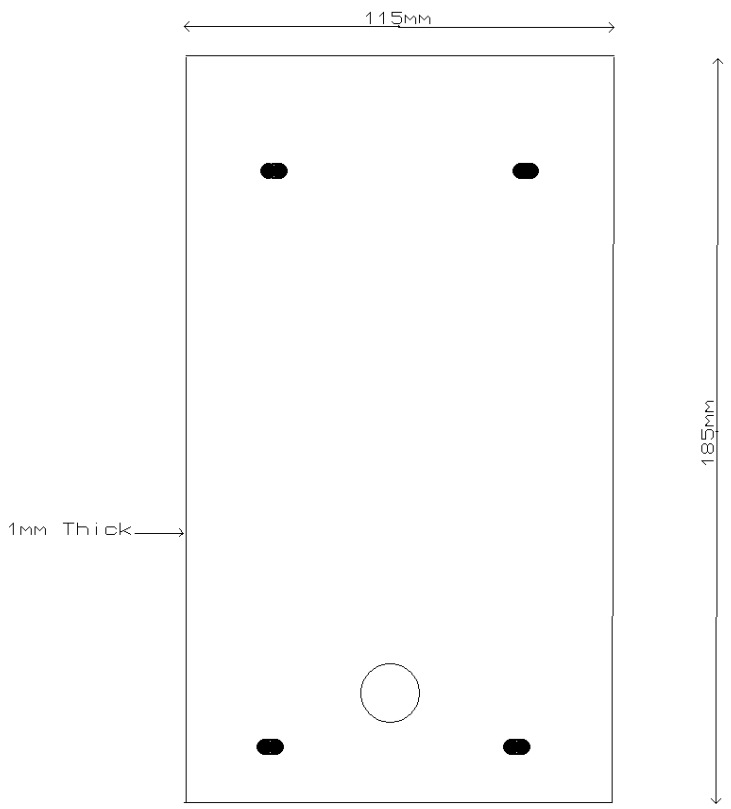

Plan View